

AVERTISSEMENT - RISQUE D'EXPLOSION - LA CARTE SIM /
PERSONNALITÉ MODULE CONNEXION EST POUR SET UP
INITIAL ET ENTRETIEN SEULEMENT. NE PAS UTILISER,
CONNECT, DISCONNECT OU MOINS D'ESPACE EST CONNU
POUR ÊTRE NON DANGEREUX. CONNEXION OU DÉCONNEXION
DANS UNE ATMOSPHÈRE EXPLOSIVE PEUT PROVOQUER UNE
EXPLOSION.

DISPOSITIF DOIT ÊTRE MIS PAR UNE CLASSE 2 SOURCE
D'ALIMENTATION.

DISPOSITIF EST OUVERT-TYPE ET EST INSTALLÉ DANS UNE
ENCEINTE ADAPTÉ POUR L'ENVIRONNEMENT.

Support, Service & Warranty

Contacting Technical Support

Note: For technical support calls within the United States, ProSoft's 24/7 after-hours phone support is available for urgent plant-down issues.
Detailed contact information for all our worldwide locations is shown below.

Internet	Website: www.prosoft-technology.com/support Email: support@prosoft-technology.com
North America	Tel: +1.661.716.5100 Email: support@prosoft-technology.com Languages spoken include: English, Spanish
Asia Pacific	Tel: +60.3.2247.1898 Email: support.ap@prosoft-technology.com Languages spoken include: Bahasa, Chinese, English, Japanese, Korean
Europe / Middle East / Africa	Tel: +33.(0)5.34.36.87.20 Email: support.emea@prosoft-technology.com Languages spoken include: French, English
Mexico, Andean Countries, Central America, Caribbean, Chile, Bolivia, Paraguay	Tel: +52.222.264.1814 or +507.6427.48.38 Email: support.la@prosoft-technology.com Languages spoken include: Spanish, English
Brazil, Argentina, Uruguay	Tel: +55.11.5084.5178 Email: support.la@prosoft-technology.com Languages spoken include: Portuguese, Spanish, English

Warranty Information

For complete details regarding ProSoft Technology's TERMS & CONDITIONS OF SALE, WARRANTY, SUPPORT, SERVICE AND RETURN
MATERIAL AUTHORIZATION INSTRUCTIONS please go to:
www.prosoft-technology.com/legal

Documentation is subject to change without notice.